

Plain, Pad or DF Tape Mount Under 24" high Letters / Logos Flat, Smooth Interior Surface

Installation Guide **POUNCE**

Letters/Logos under 24" high - interior plastic or metal letters.


Tools Required: Pounce Pattern, level, masking tape, tape measure, cleaning cloth, adhesive and/or VHB tape, pounce bags with chalk.



1. CLEAN Mounting Surface


Clean and prepare mounting surface before starting your install.

Tip: Surface should be flat, clean and free of excess dust or moisture.

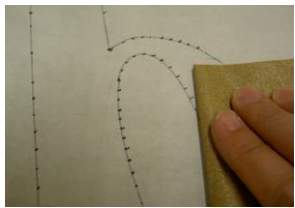

2. PREPARE pattern for installation

Pounce patterns contain many small holes that me become closed when shipped. Lightly sand back side of pattern to fully open all pattern holes.

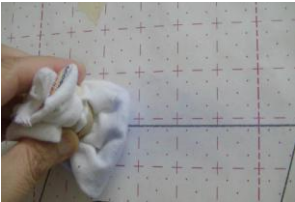

3. POSITION and Secure Guide

Layout, level and securely tape your Pounce Pattern **FLAT** to mounting surface. Check spelling, spacing and kerning of letters on pattern.

4. DUST pattern


Using a chalk bag, dust pattern holes to transfer chalk onto mounting surface.



5. APPLY Adhesive / Tape to Letters

Plain mounted letters can be installed with a quality VHB Tape, adhesive or a combination of the two. Be sure to use a quality product that will bond to the letters AND your mounting surface.

Pad mounted letters can be installed using a good quality adhesive. Install one letter at a time.

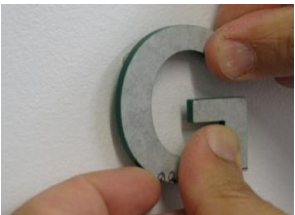

6. POSITION Letters using chalk guides

Visually install letters, using chalk dots are your guide. Align letters visually straight, **PRESS** to set or tape to wall (pad mount letters). Perform a final check, from a distance, to insure proper spelling & spacing.



7. REMOVE Masking Tape & Face Masking.

Remove masking from VHB Taped letters once set.

If adhesive was used, do not remove tape or masking until letters are set (do not move). Adhesive set time is dependent on temperature and humidity.

Once set, remove tape and letter face masking.

Clean off letter faces as needed.